

Instruction of replace rubber hood of SB-R5XX

1.



Prepare T25 driver / parts

2.



Down shift paddle through out the rubber hood.

3.



Pull back the rubber hood.

4.



Use driver to widen the rubber hood and slide into the position.

5.



Make sure hood set into the position.

6.



Put in nut and clamp.

7.



Use T25 driver to fix nut and clamp.

8.



Finished.